

SLP ENGINE PUSH ARM

P.N. 23-50 for Polaris Edge 700/800

Note: Clutch alignment should be checked and, if necessary, adjusted prior to the installation of SLP Torque and/or Push Arms.

Note: Although not required, removal of the exhaust pipe(s) will make for easier access.

- 1) Turn the push pad on the SLP Push Arm in far enough to allow clearance between it, the recoil housing, and the bulkhead.
- 2) Place the SLP Push Arm on the sloping area of the Mag side bulkhead near the top.
- 3) Adjust the push pad to snugly contact the recoil housing, such that the push pad is best centered on the recoil housing just inside the flange.

Note: The bent (U shaped) area of the push arm should contact the bulkhead its full length.

- 4) Using a scribe or center punch mark the location of the hole in the SLP Push Arm on the bulkhead.
- 5) Remove the SLP Push Arm.
- 6) Drill a 9/32" hole through the bulkhead in the location previously marked.
- 7) Reinstall the SLP Push Arm as in step 3.
- 8) Install the 1/4-20 bolt through the SLP Push Arm and the bulkhead. Install the washer and 1/4-20 nylock nut. Tighten the nut.
- 9) Readjust the push pad to a snug fit and tighten the locknut.
- 10) Reinstall the exhaust pipe(s) if they were removed for installation.

