



“Setting the World’s Performance Standards”

743 E. Iona Road, Idaho Falls, ID 83401, (208) 529-0244 Fax (208) 529-9000

SLP Performance Muffler for 2020 Polaris RZR & RZR-4 Pro XP Turbo Part# 09-122

This product is legal for closed-course competition use only
Read instructions completely before beginning installation

Kit Contents:

- | | | |
|------------------------------------|-------------------------------------|---------------------------|
| 1 - SLP Muffler (#090-1220) | 1 - 2 3/4” Exhaust Spring (#090-47) | 1 - Spring Tab (#090-697) |
| 1 - Instruction Sheet (#015-09122) | 1 - SLP Cover Plate (#091-1221) | 1 - SLP Decal (#60-60) |

Tools Required:

- | | | |
|------------------------|------------------------------|---------------|
| T40 Torx Socket | 6” Spring Hook Tool (#20-90) | Torque Wrench |
| Short Socket Extension | 10 mm and 13mm Sockets | Ratchet |

Installation:

1. Using a T40 torx socket and ratchet, remove the four screws from the rear muffler cover and remove rear muffler cover from the RZR (retain screws).

Note: If equipped with an optional rear bumper, it may also need to be removed and then re-installed once SLP muffler install is complete.

2. Remove the lower brackets that hold the rear muffler cover in place.

Note: The rear cover and lower brackets will not be reused.

3. Using a 13mm socket and ratchet, remove three nuts from muffler to header joint. While supporting stock muffler, unhook two springs using a spring hook tool (#20-90) and then remove stock muffler.

Note: Retain stock exhaust nuts, springs and gasket.

4. Install provided 2 3/4” exhaust spring (#090-47) in bottom-right stock spring hole (see illustration # 1).



Starting Line Products • 743 E. Iona Rd. Idaho Falls, ID 83401
Sales (208)529-0244 • Fax (208)529-9000 • e-mail: slp@slp.cc

For instructions in color please visit us on the web @ www.startinglineproducts.com

5. Using 10mm socket and ratchet, remove the bottom left nut on the stock heat shield (see illustration #2) and install the provided spring tab (#090-697) pointing to the 9 o'clock position.



6. Using stock spring removed in step #3, hook spring into SLP spring tab installed in step #5.

7. Install the stock exhaust gasket onto the header and install SLP muffler. Using 13mm socket and torque wrench, torque nuts to 25 ft/lbs (34Nm). Finish springing the muffler into place using stock spring on left side and supplied 2 3/4" spring on right side.

8. Using T40 torx socket, ratchet and screws removed in step #1, install the SLP cover plate (#091-1221) above muffler in location that rear muffler cover was removed from in step #1 (see illustration #3).

Note: For optional spark arrestors, order qty 2 of SLP# 090-1180

Fueling: No additional fueling modifications required.
91 octane fuel recommended.

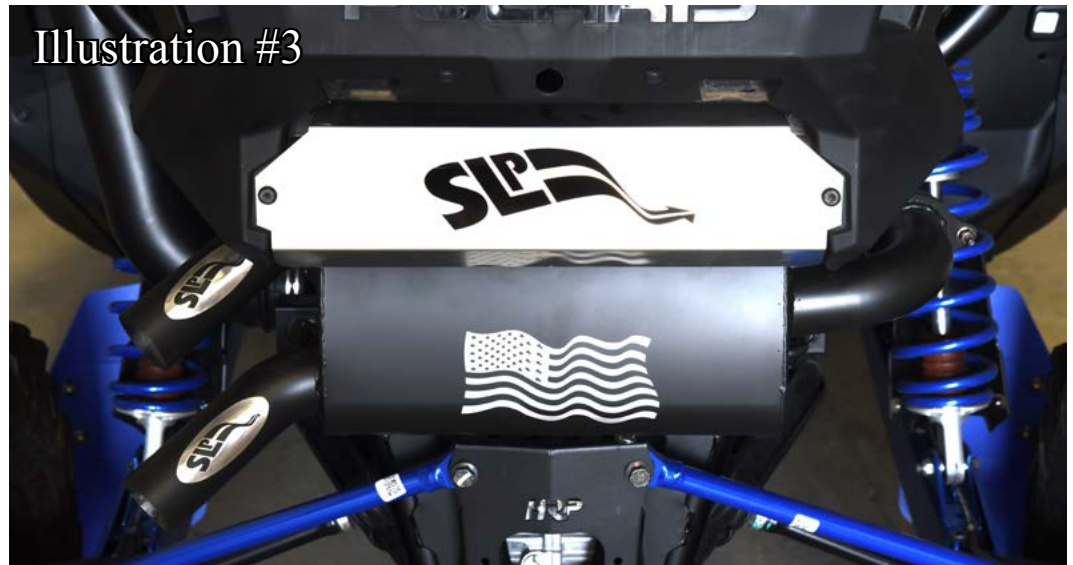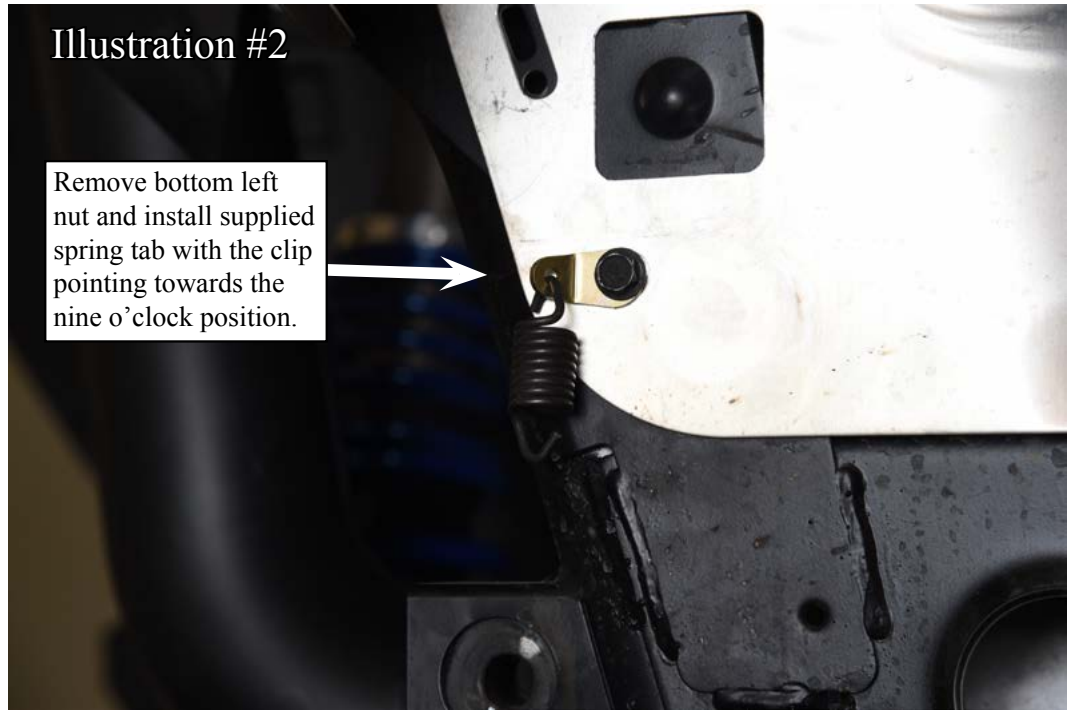

Also available for the Pro-XP:

Clutch Kits

PV3 Tuner

Stage Kits

Heavy Duty Axles

Specialty Service Tools



Starting Line Products • 743 E. Iona Rd. Idaho Falls, ID 83401

Sales (208)529-0244 • Fax (208)529-9000 • e-mail: slp@slp.cc

For instructions in color please visit us on the web @ www.startinglineproducts.com