



"Setting the World's
Performance Standards"

743 E. Iona Road, Idaho Falls, ID 83401, (208) 529-0244 Fax (208) 529-9000

SLP Super Silent Intake

for 2015-19 Polaris 900 RZR, RZR-S, XC & RZR-4

Part# 67-281

Kit Contents:

- | | |
|---|--|
| 1 - SLP Super Silent Intake Tube (#67-2811) | 1 - Installation Instructions (#015-67281) |
| 1 - SLP Decal (#60-60) | 1 - Pre-Filter (#14-226) |
| 1 - Roll Bar Clamp (#093-0061) | 1 - 1/4" x 20 Bolt (#999-0175) |
| 1 - 1/4" x 20 Nylock Nut (#999-3021) | 1 - 2" x 3" ID Rubber Hose (#093-0065) |
| 1 - Rubber Seal (#999-0237) | 1 - Hose Clamp (#999-0238) |

Tools Required:

- | | | | |
|------------------|-----------------|------------------|--------|
| #40 Torx Socket | 2 3/4" Hole Saw | 1/2" Drill Motor | Marker |
| 5/16" Nut Driver | Barrel Sander | Center Punch | |

Installation:

1. Remove both seats (rear seats on RZR-4 models), rear engine cover and all nine T-40 torx bolts on the outer air intake cover.
2. Using a 5/16" Nut Driver remove the intake ducting from the passenger side of the air box inlet.
3. Cut out the template provided, tape it into place on the right side of the intake cover. (Refer to Illustration #1) Using the template, punch the center of the circle.
4. Carefully remove the template, cut out the center circle on the template and set aside. Using a 2 3/4" Hole Saw, cut a hole into the intake housing. Reinstall the template onto the intake housing and mark around the inside of the circle. Using a barrel sander open the hole to the mark. **Use caution and DO NOT go past the mark.**
5. Install 2" x 3" rubber hose onto the airbox inlet. Using the stock hose clamp and one provided, place them over the hose but **DO NOT** tighten.
6. Reinstall the intake housing but **DO NOT** bolt into place.
7. Install the provided rubber seal over the expanded end of the intake tube. Then install the intake tube through the hole in the intake housing, with the expanded end going into the rubber hose on the air box. Using dish soap and a blunt screw driver, install the rubber seal into the intake housing. (Refer to Illustration #2)

Starting Line Products • 743 E. Iona Rd. Idaho Falls, ID 83401
Sales (208)529-0244 • Tech (208)524-3397 • Fax (208)529-9000 • e-mail: slp@slp.cc
For instructions in color please visit us on the web @ www.startinglineproducts.com

8. Install the provided roll bar clamp onto the roll bar just above the seat belt mount. Then using the provided 1/4" x 20 bolt and 1/4" x 20 Nylock nut secure the intake tube to the roll bar clamp. (Refer to Illustration #3)

9. Tighten the hose clamps on the Rubber Hose connecting the intake tube to the air box. Then Reinstall all nine torx bolts that hold the intake housing in place, seats and engine cover.

NOTE: Prefilter should be removed for open trailering. **DO NOT** pressure wash filter, rinse with water and let air dry.

67-281



Illustration #1

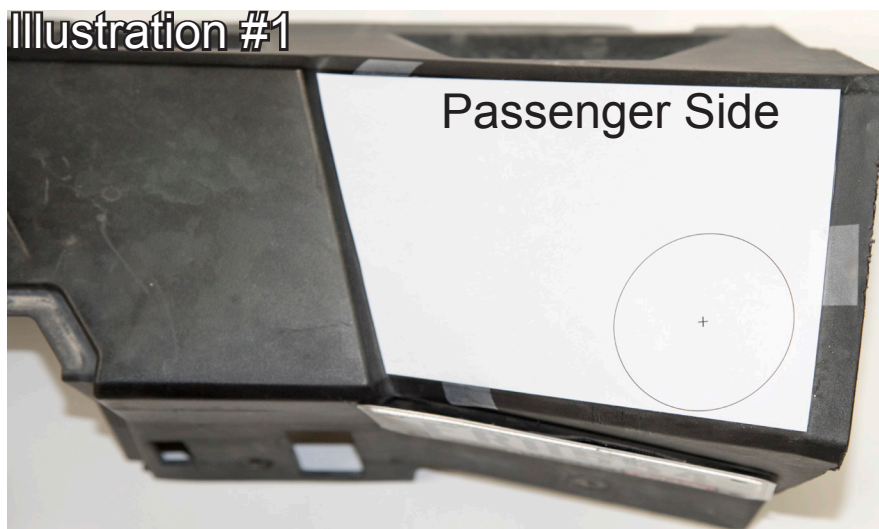



Illustration #2



Illustration #3



Template

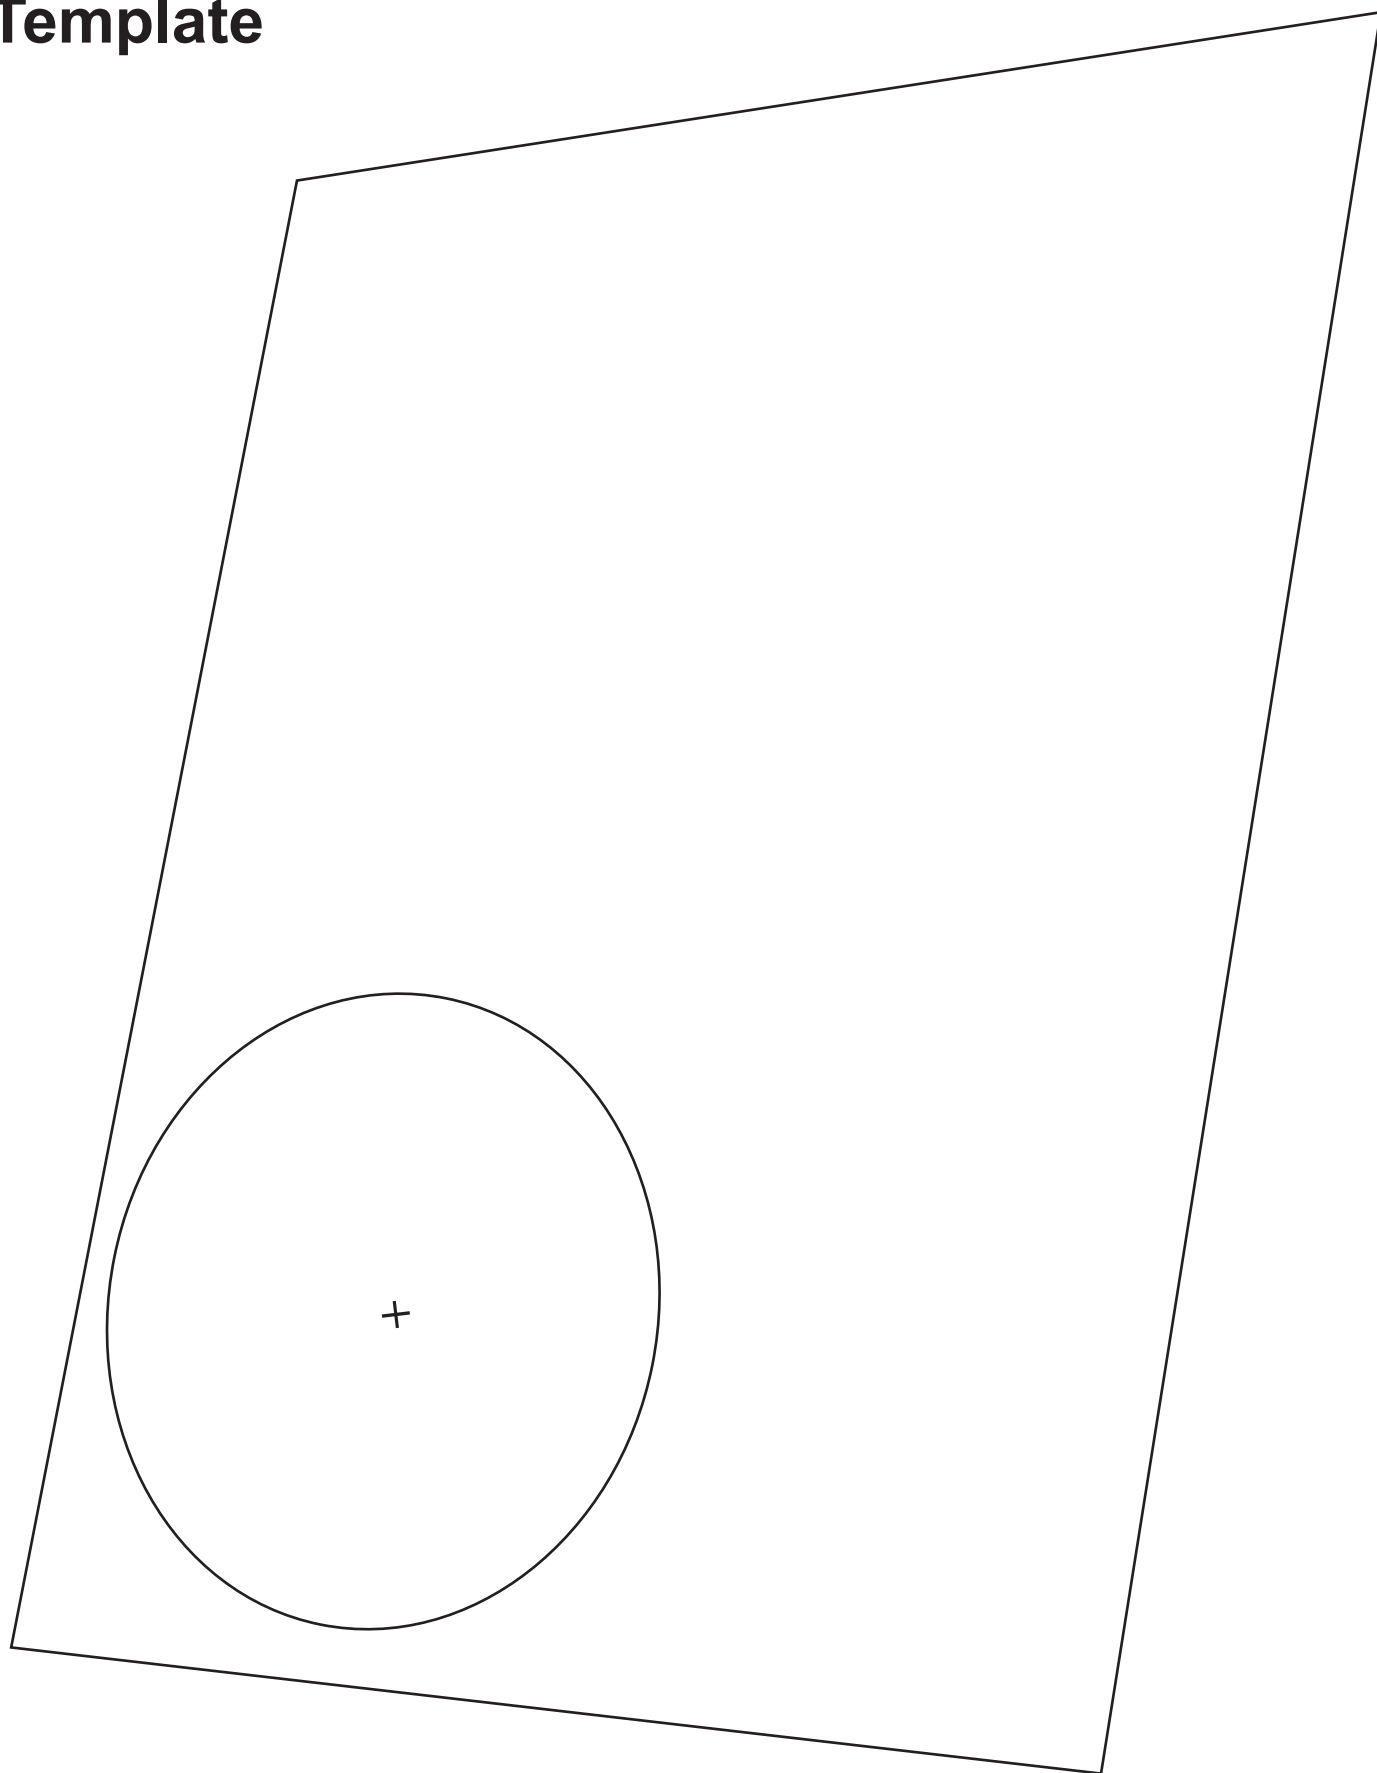

Starting Line Products • 743 E. Iona Rd. Idaho Falls, ID 83401
Sales (208)529-0244 • Tech (208)524-3397 • Fax (208)529-9000 • e-mail: slp@slp.cc
For instructions in color please visit us on the web @ www.startinglineproducts.com